 


- D** Türklingel 3-Ton
- GB** Door bell 3-tone
- F** Sonnette de porte appel 3 tonalités
- I** Campanello del posto esterno chiamata tritonale
- NL** deurbel 3-tonig
- DK** Dørklokke 3-tone
- SE** Dörringklocka 3-ton



HTS 811-0

- D** Etagenlingel 2-Ton
- GB** Storey bell 2-tone
- F** Sonnette d'étage appel 2 tonalités
- I** Campanello del piano chiamata bitonale
- NL** etagebel 2-tonig
- DK** Etageringetryk 2-tone
- SE** Våningsringklocka 2-ton



- D** Türöffner schalten
- GB** Door release switching
- F** Actionner la gâche
- I** Azionamento apriporta
- NL** Deuropener schakelen
- DK** Aktivering af døråbner
- SE** Koppla dörröppnaren



- D** Licht schalten
- GB** Light switching
- F** Mettre la lumière
- I** Accensione luce
- NL** Licht schakelen
- DK** Lystænding
- SE** Koppla ljuset



- D** Klingeltonlautstärke einstellen
- GB** Setting the ring tone volume
- F** Régler le volume de sonnerie
- I** Impostazione volume campanello
- NL** Beltoonvolume instellen
- DK** Indstilling af ringetone's lydstyrke
- SE** Inställning av ring-signalens ljudstyrka